

Neutralize Natural Deodorant

SH-02-07-03

Natural solution for long lasting odor protection in an aluminum and baking soda free formulation. Works through multiple pathways by inhibiting esterase-based metabolism of sweat components, targeting specific antimicrobial activity and neutralizing odor causing molecules, to keep you feeling fresh all day.



Neutralize Natural Deodorant

SH-02-07-03



Ingredients	INCI Nomenclature	Suppliers	% w / w
A DI-Water Zemea® Propanediol GLE Organic Glycerin	Water (Aqua)	---	qs
	Propanediol	DuPont Tate & Lyle Bio Products	45.00
	Glycerin	Green Line	5.00
B Sodium Hydroxide 10%	Water (Aqua), Sodium Hydroxide	---	9.50
C Stearic Acid	Stearic Acid	---	6.00
D VELAFRESH™ ZP30 Evicare® deo GreenSens™ TEC bio RESPLANTA® HEMP IN-FUSION MB	Sodium Zinc Polyitaconate Copolymer	Itaconix	3.00
	Polyglyceryl-2 Caprate	Evident Ingredients	1.00
	Triethyl Citrate	Green Line	1.00
	Cannabis Sativa Seed Oil Glycereth-8 Esters	ResPharma	2.00
E GreenSolv™ Clear Max	Caprylyl/Capryl Glucoside, Water (Aqua), Sodium Cocoyl Glutamate, Glyceryl Caprylate, Citric Acid, Polyglyceryl-6 Oleate, Sodium Surfactin	Green Line	2.00
	Fragrance	---	qs
F Omyaskin® 100-OG	Hydroxyapatite, Calcium Carbonate	Omya, Inc	5.00
			100.00

Procedure

1. Add ingredients in Phase A and heat to 85-95°C with moderate mixing. Mix until clear.
2. Add and dissolve Phase B.
3. Add Phase C and continuously mix at 85-95°C until all solids melt and solution becomes clear.
4. Add the water that was evaporated from heating and add Phase D. Mix until smooth and uniform.
5. Reduce heat to 80°C. Premix Phase E until uniform. Add Phase E and mix until homogeneous.
6. Add Phase F and mix until homogeneous. Pour hot into stick components.


How To Use

Liberalley glide on underarms.



Innovation Comes Naturally™

Scan To Learn More

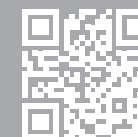

Omya Specialty Materials Inc.

5150 E. Pacific Coast Hwy, Suite 600

Long Beach, CA 90804

(562) 961-3333 | PersonalCareUS@omya.com